


Moteur monophasé autofreinant / Self (DC) brake single-phase motor

Alimentation directe / Direct supply:

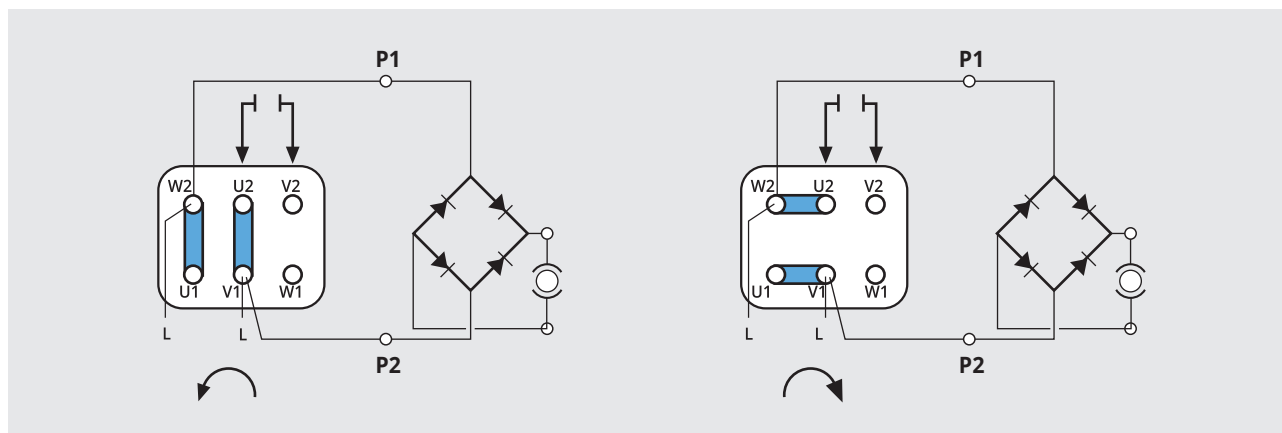

Alimentation séparée : brancher directement l'alimentation aux bornes P1 et P2
Separate supply: connect directly the supply to the terminals P1 and P2